

**LC SERIES  
CONTROL CARDS**

**USER MANUAL**

**AE**

**AYBEY ELEKTRONİK**

# **LCR,LCM and LCI CARDS AND THEIR FUNCTIONS**

## **LCM Main Card**

LCM, is the main board in the system. It read all inputs by itself and via LCR and LCI. It then outputs necessary data to activate motor, doors and signals. The lift parameters are also stored in LCM. They can be easily changed by program buttons. It displays the current floor and target floor by using digital displays. When an error occurs, it displays error code.

## **LCR Relay Card**

According to the commands by LCM, it produces the outputs which perform all relevant processes with respect to car motion, security circuit and door. By means of the leds on the card, it can be observed that what process the lift is performing and the state of the security circuit.

## **LCI Input / Output Card**

It transmits the call data to LCM and turns on the registration lamps. In order to be able to identified by LCM, it is necessary to connect the jumper whose number is the sequence number of LCI card according to the LCM.

## **Terminal Signal Ends**

- Main power ( R,S,T,Mp)
- Motor (U1,V1,W1,U2,V2,W2)
- Security Circuit (101,120,130,140)
- Call / Registration lamps (10,11,12.....)
- Magnetic Switches (M0, ..... , M4)
- Level Stopper(MK) / In Hydraulic Systems MK1-MK2 (F7-F8)
- Digital Display (a,.....g,1,-)
- Revision Signals(500,501,869)
- Brake(840,2000)
- Retiring Cam / Door Close (810,2001)
- Load Contacts (802,804,805)
- Direction Arrows (31,32)
- Busy controlled output (190)
- Busy(12)
- Cabin Lamp(2)
- Limit Switches(817,818)
- PTC Motor thermistor (T1,T2)
- Door Buttons (K20,DTS)
- Fire (FIRE)
- Common of display and signal lamps, +24V DC (100)
- Common of Register and Bistable GND(1000)

<b>PANEL VOLTAGE INFORMATION</b>	
Panel Input Voltage	3 Phase 380v-MP
Contactor Supply Voltage	220v AC or 48v DC
Phase Protect Cut off Voltage	+/- 20 %
Brake Supply Voltage	180v DC / 48v DC
PTC Cut Off Resistance	> 500 ohm
Security Circuit Voltage	48v DC
1000	Ground
100	24v DC
101	48v DC
Display Common Voltage	24v DC

### **IMPORTANT POINTS WHILE ASSEMBLING ELECTRONIC CARDS**

**Supply Voltage of Electronic Cards:** Electronic cards needs a supply voltage, to perform their functions, beside input signals. This voltage is stated as AC or DC in the inputs. The most important point here is to give true type of voltage (AC or DC , which is necessary). Another important point is value of the voltage  
 For example : When we need 12v AC supply and use a 220v/12v transformer. If the voltage has excessive ripples or voltage level is lower, then this causes some tides and locks to occur on cards. On the contrary, if the voltage level is higher, then this causes the voltage level on the circuit components to get higher and make them broken. In such cases , the best thing to be done is to choose the right transformer ,which holds the supply voltage in an optimum range, by contacting with producer.

**Input / Output Terminals:** If the cards are not connected according to the manufacturer's drawing serious problems may occur. The most important point is to connect the right terminal to the right point. The best method for this is to mark the cables first and control the voltage level by a voltmeter before connecting. Outputs of electronics card differs in respect of used components. This can be summarised as ;

- Opto Coupler Input / Output Circuits
- Transistorised Output Circuits
- Relayed Output Circuits

## OUTPUT TERMINALS AND THE MEANINGS OF THE ABBREVIATIONS

<b>1, A,.....G</b>	Digital Display Outputs	<b>C0,....C7</b>	Register button inputs
<b>2</b>	Cabin lamp		Register lamp outputs
<b>8AC/12AC</b>	12v AC	<b>RH</b>	High Speed Contactor
<b>12</b>	Busy Signal	<b>RF</b>	Low Speed Contactor
<b>31</b>	Down Arrow Signal	<b>RU1</b>	Down Direction Contactor
<b>32</b>	Up Arrow Signal	<b>RU2</b>	Up Direction Contactor
<b>35</b>	Over Load Signal	<b>R, S, T</b>	Phases
<b>39</b>	Out of Service Lamp(Inspection)	<b>FKR</b>	Phase failure detector
<b>40AC</b>	40v AC	<b>SFP</b>	Brake and Cam Fuse
<b>100</b>	+24v DC	<b>M0,....M4</b>	Magnetic Switches for Gray Code
<b>101</b>	Security Circuit Supply (48v DC)	<b>SKL</b>	Cabin Lamp Fuse
<b>120</b>	Stop Circuit Return	<b>KA</b>	Open Door Signal Output (Transistor 011)
<b>130</b>	Door Contacts Return	<b>K20</b>	Open Door Button
<b>140</b>	Door Locks Return	<b>KK</b>	Close Door Signal Output (Transistor 011)
<b>190</b>	Hall call common for Simple Push Button	<b>DTS</b>	Close Door Button
<b>500</b>	Inspection Up Button	<b>VK</b>	Contactor Supply Voltage
<b>501</b>	Inspection Down Button	<b>SK-S55</b>	Contactor Fuse
<b>802</b>	Minimum Load Contact	<b>LCM</b>	LC Series main card
<b>804</b>	Over Load Contact	<b>LCI</b>	LC Series I/O card
<b>805</b>	Full Load Contact	<b>LCR</b>	LC Series Relay Card
<b>2001</b>	Positive terminal of Cam	<b>Mp</b>	Neutral (Main power)
<b>810</b>	Negative terminal of Cam	<b>SXX</b>	Fuses
<b>810A</b>	Open Door Signal (automatic door)	<b>MK</b>	Stop Switch
<b>817</b>	Lower Limit (End of high speed way)	<b>TMS</b>	Thermic Magnetic Circuit Breaker
<b>818</b>	Upper Limit (End of high speed way)	<b>TR</b>	Thermic Relay
<b>840</b>	Positive terminal of Brake	<b>T1-T2</b>	PTC Motor thermistor terminals
<b>2000</b>	Negative terminal of Brake	<b>FIRE</b>	Fire Contact
<b>869</b>	Inspection control input	<b>MK1-MK2</b>	Stop switch-Magnetic Switch for Hydraulic System (up and down)
<b>1000</b>	Signal and Security Circuit Ground		

## PLACING OF MAGNETIC SWITCHES

**Install the system by the following order:**

1. Place bi-stable magnetic switches onto the car in such a way that the front of the switches face to the inner side of guide rail. If there is no rail between the switches, fix them at least 10 cm away from each other.
2. Connect the one terminal of M0,M1,M2 and MK switches to 1000(M+) common and the other terminals to M0,M1,M2 and MK inputs.
3. After connecting the switches to the card take a magnet in your hand, face it to any switch and then invert it. In this case the led of the relevant magnetic switches between on and off states. By this way you can check the cable from the top of the car to the panel.
4. After checking the switches as told above, take the car to the first floor in inspection mode and place the magnets according to the magnet location diagram. When you reach to the next floor and locate the magnet, you will see the new floor number at all displays or “At Floor” light at one upper floor. If there is a mistake, then take a magnet and move it in front of the switches till you find the last current floor number then search for your mistake. Don't leave that floor until you solve the problem.
5. After completing this job, move the car from bottom floor to the top floor and during this travel observe the display. If you can see all floor numbers correctly then placing magnet has been done successfully.
6. If your system is two speed, locate the magnets in the way of MK. If you locate these correctly, when the car reaches to the exact floor level , the MK led of that floor, on the LCM card, will be off and will remain on at other locations
7. At last, take the car to the first floor locate the KSR1 magnets to the same level with the magnet on the M0 path and take to the last floor to place KSR2 on the same level of the magnet of M0,M1,M2,M3 and MK.  
After locating these, follow above test procedure:
  - Stop the car any level lower than KSR1 magnet. Take a magnet and change the floor number by facing it to the opposite of the switches. If you call the car to the bottom floor by using control panel, then the car must not move but if you call it to any upper floor than floor display it must go.
  - Stop the car any level upper than KSR2 magnet. Take a magnet and change the floor number to any number less than the top floor by facing it to the opposite of the switches. If you call the car to the top floor by using control panel, the car must not move but if you call it to an lower floor than floor display it must go.
8. After completing above processes successfully, take the lift to the normal control and leave for usage.

## PROGRAMMING LC SERIES

System parameters of LC Series lift controllers can be observed and modified easily by using three mini buttons located on the main board, LCM. These buttons are named as follows:

PROG



INC



DEC



### A) MODIFYING PARAMETERS

In order to enter programming mode inspection switch must be on. When the lift is in inspection mode you have to hold your finger pressed onto the (PROG) button until you see the following display on LCM board

(PROG).....(PROG)

n 0 0

Now the system is in programming mode. This display structure (letter 'n' in first display) shows the program number ('00' in this example, left two displays). The programs with the numbers 00..19 are used for hall and cabin display patterns. Other programs are used as system parameters in controller.

In order to see or modify the data stored in a program number, first you have to find it. When you entered the programming mode first you see a display exactly as above. You can increment program number by pressing (INC) button or decrement it by pressing (DEC) button (shortly). But when you have reached lower and upper limits then the program number cycles to the opposite limit.

For example let us assume the display shows program 24 as follows:

n 2 3

(INC)

n 2 4

(DEC)

n 2 3

(DEC)

n 2 2

(DEC)

n 2 1

In order to see the data stored in a program cell you have to press (PROG) button shortly.

n 2 1

(PROG)

0 0 8

Now the display shows the data stored in program number 21. As an information program number 21 stores the number of stops (floors) in the system. So this controller works with 8 stops.

In order to increment or decrement the data (the number of stops in the system) you can use (INC) and (DEC) buttons exactly as in program finding procedure

(DEC)

0 0 7

(DEC)

0 0 6

After you corrected the data (found the number in display which corresponds to the number of stops in the controller) you have to press (PROG) button once to return to the previous level (program selection level).

(PROG)

n 2 1

You can observe and / or modify as many programs as you want in one programming session. Be aware that no data you have modified until now is written to the EEPROM. The modified data is still in RAM. But when you exit when you are in program selection level by pressing (PROG) button long until the system leaves the programming mode, then last configuration you prepared is stored into EEPROM and the control uses these new parameters in operation. After this point any power breakdown does not influence the parameter memory.

When you exit from programming mode by holding (PROG) button down until the display shows the floor where the car stays, then system is ready to function as a controller again.

(PROG).....(PROG)

3

Where 3 stands for floor number 3.

## B) FUNCTIONS OF PROGRAMS

The corresponding functions of program numbers:

- 0..19 : Digital display codes for floors 0..19
- 20 : Programming codes
- 21 : Number of stops
- 22 : Lift traffic model
- 23 : Lift door type
- 24 : Definition of parking floor
- 25 : Parking floor
- 26 : Maximum lock waiting time

- 27 : Number of I/O boards in the system (LCI)
- 28 : Busy time
- 29 : Automatic door open waiting time
- 30 : Waiting time in floor before departure for the next floor (only in collective models)
- 31 : Parking floor in fire
- 32 : Maximum floor transition period
- 33 : Definition of floor level stopper
- 34 : Definition of error reporting mechanism

**PROGRAM 0..19** : These programs store the digital display codes for the corresponding floors. Program 0 holds the code for the floor 0 and program 6 the code for the floor 6. These codes control hall and cabin displays but not the display on LCM board. You can enter any code between 0-255. There is table below which shows the codes for some characters. The characters are not limited with this table. If you need any character other than the ones in table then please call any AYBEY technical service.

0	219	10	223	A	249
1	9	11	13	B	234
2	179	12	183	L	194
3	59	13	63	r	160
4	105	14	109	P	241
5	122	15	126	C	210
6	250	16	254	E	242
7	25	17	29	F	240
8	251	18	255		
9	123	19	127		

**PROGRAM 20** : This program does not store any data for any controller function. Program 20 is used to shortcut for some popular digital display configurations.

Here are allowed commands for program 20 and their jobs:

11 : This command fills the program memories 0 to 19 with the digital codes for numbers 0..19. So resulting digital codes are 0,1,2,3,4,...

12 : This command fills the program cells 0..19 exactly as in command '11'. In addition to this it also fills the other program cells (system parameters starting from program 21) with the factory defaults.

8 : This command shift all programs between 0..19 one step down. After executing this command program 1 is shifted to 0, program 2 is shifted to 1 and so on. For example a system like 0,1,2,3,4,... is 1,2,3,4,5,... after execution.

21 : This command organises digital display numbers as -1,0,1,2,3,...

22 : This command organises digital display numbers as -2,-1,0,1,2,...

23 : This command organises digital display numbers as -3,-2,-1,0,1,...

1 : This command shift all programs between 0..19 one step up. After executing this command program 0 is shifted to 1, program 1 is shifted to 2 and so on. For example a system like 0,1,2,3,4,... is 0,0,1,2,3,... after execution.

2 : This command shift all programs between 0..19 two step up. After executing this command program 0 is shifted to 2, program 1 is shifted to 3 and so on. For example a system like 0,1,2,3,4,... is 0,0,0,1,2,3,... after execution.

3 : This command shift all programs between 0..19 three step up. After executing this command program 0 is shifted to 3, program 1 is shifted to 4 and so on. For example a system like 0,1,2,3,4,... is 0,0,0,0,1,2,3,... after execution.

**PROGRAM 21** : This program holds the number of stops in lift system. You can enter any number between 2 and 24.

**PROGRAM 22** : This program stores the parameter which decides the traffic system of the lift as follows:

0 : Simple push button

1 : Simple collective in both directions (not selective)

2 : One call button down collective

3 : Two call buttons full collective

Note: if program 27 is 0 then program 22 is automatically 0 (simple push button)



**PROGRAM 23** : This program stores the parameter for lift door as follows:

- 0 : Semi-automatic landing door, no cabin door
- 1 : Semi-automatic landing door, with cabin door
- 2 : Full automatic cabin and landing doors.

**PROGRAM 24** : This program defines the parking facility of the lift as follows:

- 0 : No parking floor
- 1 : Parking floor is defined. The car waits at the parking floor with closed doors.
- 2 : Parking floor is defined. The car waits at the parking floor with open doors.

If this parameter is 1 or 2 then the car moves to the parking floor, which is specified in program 25, when no call is present for at least 80 seconds after last lift motion.

**PROGRAM 25** : This program stores the parking floor if program 24 is 1 or 2. This number must be less than the one stored in program 21.

**PROGRAM 26** : This program stores maximum time period to wait door lock closed after a door close signal is sent. It accepts a number between 6-200. So you can adjust this time from 2 sec. to 50 sec..

**PROGRAM 27** : This program stores the number of I/O cards connected to the system. It accepts values between 0 to 8. If program 27 is 0 then program 22 is forced to 0 and the system can function only in simple push button.

**PROGRAM 28** : This program stores busy period. It can be adjusted between 40 and 200. Each number represents about 12 sec.

**PROGRAM 29** : This program stores the time period to wait doors open before reclosing them when the doors are full automatic. It can be adjusted between 30 and 200. Each number represents about 12 sec.

**PROGRAM 30** : This program is used only in collective systems. It stores the parameter for the time period where the car waits before departure for the next call. The parameter can be adjusted between 3 and 45. Each number represents about 3.5 sec.

**PROGRAM 31** : This program stores the floor, where the car moves when a fire signal is detected. The car, after reaching fire-floor, waits there with open doors. If you enter here a number greater than the one in program 21 an error with the number 226 is reported by the system.

**PROGRAM 32** : This program stores a parameter which stands for the maximum time allowed the car to move from one floor to the next one. If this time is exceeded then the car is stopped by the system and an error is reported (249). The parameter can be adjusted between 2 and 15. Each number represents about 2.5 sec. This function is inhibited when program 34 contains 1 as parameter.

This program is very crucial. In case of any mechanical problem which prevents the motion of the car or any fault in floor detector system may cause some new big problems if the motor is not switched off immediately. It is strongly recommended to adjust this function properly when the lift is in service.

**PROGRAM 33** : This program organises MK detector, which stops the car at exact floor level. The functions of the allowed parameters are as follows:

- 0 : There is only one floor level stopper present in the system. MK input on the LCM board is used as stopper in up as well as in down direction.
- 1 : There are two floor level stoppers used in the system. F7 input on the LCM board is used in up direction as MK1. F8 input on the LCM board is used in down direction as MK2. In this case MK input on LCM no function.

**PROGRAM 34** : This program is used to control error reporting mechanism. The allowed numbers and their functions are as follows:

- 0 : System reports all errors and stops the car in all errors.
- 1 : Only errors which are related to the security circuit are reported. Also the car is stopped only in security loop errors. Secondary errors like 249, 250, 252, 253,.. are not processed.

**PROGRAM 35** : This program is used to specify if the system uses the 3. speed. 3. speed is used in variable speed lifts if the car speed is above 1.6 m/sec.

- 0 : No 3.speed is used.
- 1 : 3. Speed is being used. When 3.speed is active then RH and RF are both ON at the same time.

**PROGRAM 35** : This program shows the software version of the microprocessor.

## **ERROR CODES**

LC system reports some faults by flashing displays. The meanings, possible causes and recommendations for error codes are as follows:

**222** : This code is reported when the traffic system or number of stops specified in program requires more I/O boards than connected in system.

**123** : This code is reported when the inputs can not be read safe enough. It is mainly caused from electromagnetic interference or bad cable or terminal connection.

**225** : This code is reported when the parking floor (program 25) is greater than maximum number of stops (program 21).

**226** : This code is reported when the fire- floor (program 31) is greater than maximum number of stops (program 21).

**130** : This code is reported when the door contact circuit is broken during motion.

**140** : This code is reported when door lock circuit is broken during motion or door lock cannot be sensed as closed after cam or door close signal is applied.

**241** : This code is reported when KSR1 and KSR2 are open at the same time. This error is also reported when stop circuit is open.

**249** : This code is reported when no change in floor number is detected in the time interval defined in program 32 when the car is in motion. This error may be caused by any mechanical or electrical fault which inhibits motion as well as any fault in floor detecting system. Be aware that any number in program 32 which is small can also cause this error.

**250** : This code is reported when floor detecting system sends any information as floor number to the controller above highest floor (defined in program 21).

**252** : This code is reported when the car moves in up direction and the next floor number returns from floor detecting system other than the expected one.

**253** : This code is reported when the car moves in down direction and the next floor number returns from floor

# FREQUENTLY ASKED QUESTIONS

## 1. In push-buttons, there is nothing on displays at stops 0 and 1.

- Enter 11 to the program 20. If it repeats contact to the main service.

## 2. In push-buttons displays always show the same floor or meaningless things.

- The IC ULN2803 may be burnt out because of over current. Check your connections if you are sure that connections are correct than change the IC with a new one. The IC is under the display output socket on the LCM card.

## 3. Displays on push buttons show nothing.

- Common terminal of the display may be connected false. Check whether it is connected to 100 or not.
- Change the IC ULN2803.

## 4. Display shows wrong floor or never changes.

- The magnet locations may be mistaken. Check them according to the location schematics.
- There may be a broken magnetic switch.
- The common terminal of magnetic switches may be not connected or wrong connected. Check whether it is connected to 1000 or not
- Magnetic tubes may be too near or too far to the magnets. Check the distance between them through the well.

## 5. Push button displays and car displays show different things.

- Dip switch settings of KDS card in inspection box may be fault. Look at the FIGURE 25 and check the settings.
- Installation of KDS card may be wrong. Look at the FIGURE 25 and check the connections.

## 6. The lift does not get any registration.

- The jumpers on output card (LCI) may be placed false. Starting from left card, the jumper of 1<sup>st</sup>. LCI-08 card must connect 1<sup>st</sup> pin, the jumper of 2<sup>nd</sup> LCI-08 card must connect 2<sup>nd</sup> pin and so on... According to the number of output cards, this connection logic goes on. Check this connections (FIGURE 1).
- The number of output cards(LCI 08) may be entered more, than your system has, to the program 27. For example, if there are 2 output cards in your system and you entered a greater number than 2, then this cause a fault. Therefore check the program content. Beside this, check the floor number in program 21 and traffic system in program 22.

## 7. Automatic door does not open.

- System may suppose itself between the floors. If so it does not start to open door. Check whether the MK led, on the LCM card (the main card at center ), is off or not. This led must be off when the car is at any floor.

## 8. Automatic door does not close.

- 120 may be shunted through contact switch circuits. After starting to open door, the system must detect that the door is opened. The system check this by looking whether 130 and 140 circuits are cut or not. By this way the system understands that the door is opened and after a while it closes the door. If contact switch circuits are shunted, remove the shunts.
- Check whether there is a mechanical obstruction or not.

## 9. Lift moves only one direction.

- One of the compulsory 2<sup>nd</sup> speed switches may be open. Therefore the system may suppose itself at upper or lower limit levels. Check whether 817 and 818 leds, on relay card, are on or not. At normal operation both must be on. If the car do not exceed the well limit levels and one of the leds is off ;

- a) Check whether KSR magnetic switches run or not.
- b) Check KSR magnetic installation.
- c) Check the locations of the magnets located to the limit levels ,which codes the KSR tubes.
- d) ULN 2803 IC may be burnt out because of over current. Change this with a new one. The IC is under the security circuit led group on the relay card.
- e) If the directions relays, on the relay card, close (you can observe the leds) , then check the unclosed contactor connections which comes to the coil ends.

**10. Although everything looks normal, lift does not move.**

- Motor protection relay( FKK) may be in off position. Then it prevents the energy to reach the contactors and the lift can not move. If phase protection is not active, contactors are not energised. AYBEY FKK is phase order sensitive and if the phases are not on specified order, phase protection disables the system. You can check whether the motor protection is active or not, by looking the red led on it. If this led is off;
  - a) Any phase may be absent. Check all phases.
  - b) Voltage level may be too low. Check it.
  - c) Phases may be not on specified order. Change the place of any two phase from R-S-T. For example: Connect the cable at R terminal to the S terminal and connect the cable at S terminal to R terminal.
  - d) LCR card or card connections may be faulty.
  - e) Check the contactor fuse(SK).

**11. Lift does not open the door when it comes to floor.**

- System may still suppose itself between the floors. You can check this by MK led ,on the LCM card. MK must be off at floors and must be on between the floors. If the MK is still off when the car is at floor, the car may see the next magnet by sliding after stopping. In order to prevent this, in automatic door systems, locate the black magnets, which are under and over the floor level of MK, in the automatic door opening range. ( It is about a hand span up and down.)

**12. The lift always goes the floor (X).**

- If the lift gets a registration itself at 1 minutes after stopping, a park stop has been defined.(Prog24)
- If the lift gets a registration to X number floor as soon as arriving any floor, change the ULN2803 IC on the output card( LCI-08).

## LC SERIES ONE SPEED LIFT SYSTEM

1. In LC series one speed systems all the schematic diagrams, used for two speed systems, can be used by taking below changes into consideration.

The differences are ;

1. As in the Figure 11, RH and RF contactors are short-circuited and directly connected to the coil of a common contactor RU3 instead of energising two different contactors through their closed contacts.
2. The magnetic switches, informing floor number ( like M0,M1,M2 .... ), are moved to a brake distance away from floor level.(It is about 5 cm up and down from exact floor level)
3. No changes are required in programmes.
4. No magnetic switch is connected to the MK input of the LCM card except full automatic door lift systems. Neither magnet nor magnetic switch is placed to the MK path and this path is not used.
5. In full automatic door systems, MK path may be used to prevent the door from opening between floors. However, in this case the magnets of MK path must be further to the floor level than the M0,M1,M2.... magnetic switches.
6. Motor and power connections are as in the Figure 11. and the Figure12.