



\*817-818 : When mechanical switches are used as high speed switches in well, ignore these connections in cabin connections.

\*\*ML1-ML2 : Use when Floor Selector is [A05]=0; pre-opening door or releveing activated or UCM Controller [A17] is set to 4 or 6. Standard in hydraulic system.

\*\*\*MKU-MKD : Use when counter type (A05: 0 or 6)

# LIFT CONTROLLER

Automatic Landing Door 120 130  
Semi-automatic Landing Door 135 130

This document is a sample for applications. All information contained in these materials are subject to change by Aybey Elektronik without notice. Aybey Elektronik assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

SERIAL CAR CONNECTIONS				
AYBEY ELEKTRONIK	SERIES	ACT	DRW.	M. AKKUŞ
	PROJ.	ACT029	APPRV.	M. AYBEY
	REV.	05	DATE	24 JUN 14

F/7.5.5.02.69